


# KLWSB

## Stijgbocht voor KLW

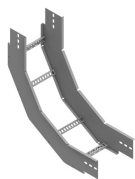

### Te bevestigen met:



Zelfborgende  
kraagbout (DIN  
603)  
RBK

Zelfborgende  
flensmoer (DIN  
6923)  
RM

Radius: 600 mm

| Artikel           | Afwerking | ↕<br>mm | ↔<br>mm | →  ←<br>mm | ↔<br>mm | kg/stk | 📦 | Eenh. |
|-------------------|-----------|---------|---------|------------|---------|--------|---|-------|
| <b>KLWSB200</b>   | SZ        | 200     | 208     |            |         | 7,921  | 1 | STK   |
| <b>KLWSB300</b>   | SZ        | 200     | 308     |            |         | 8,228  | 1 | STK   |
| <b>KLWSB400</b>   | SZ        | 200     | 408     |            |         | 8,535  | 1 | STK   |
| <b>KLWSB500</b>   | SZ        | 200     | 508     |            |         | 8,842  | 1 | STK   |
| <b>KLWSB600</b>   | SZ        | 200     | 608     |            |         | 9,149  | 1 | STK   |
| <b>ZMKLWSB200</b> | DF        | 200     | 208     |            |         | 7,921  | 1 | STK   |
| <b>ZMKLWSB300</b> | DF        | 200     | 308     |            |         | 8,228  | 1 | STK   |
| <b>ZMKLWSB400</b> | DF        | 200     | 408     |            |         | 8,535  | 1 | STK   |
| <b>ZMKLWSB500</b> | DF        | 200     | 508     |            |         | 8,842  | 1 | STK   |
| <b>ZMKLWSB600</b> | DF        | 200     | 608     |            |         | 9,149  | 1 | STK   |

Minimum aantal bouten en moeren: 8 stuks.

### Legende afwerking

- SZ = Sendzimir
- DF = Defender